


REFRAME[®] CUBE ASSEMBLY GUIDE



RC051 PROFILE

PRODUCT CODE: REFRAME[®] CUBE (RC051)

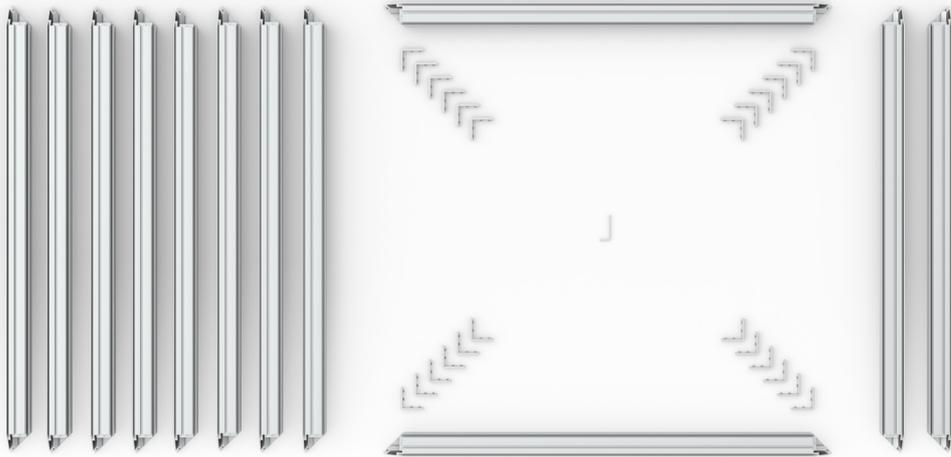

1

Layout the Reframe[®] components on a flat surface and ensure you have everything required before you start the assembly.


CHECKLIST

| | |
|-----|------------------------------|
| 12x | REFRAME [®] LENGTHS |
| 24x | BRACKETS |
| 1x | ALLEN KEY |


2 Insert corner bracket into frame length (ensuring the bracket is set in as far as possible)



3 Repeat Step 2 on the remaining 3 corners of the bottom frame lengths

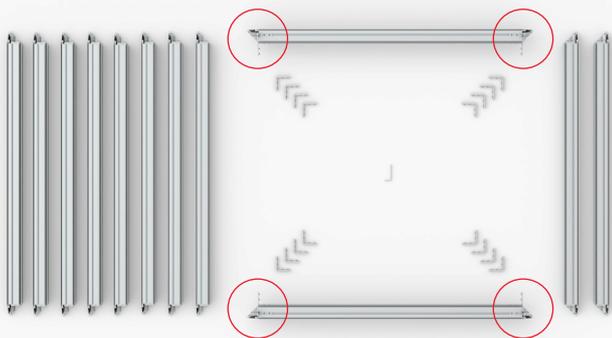


4 Bridge the two parallel bottom frame lengths to make a square base

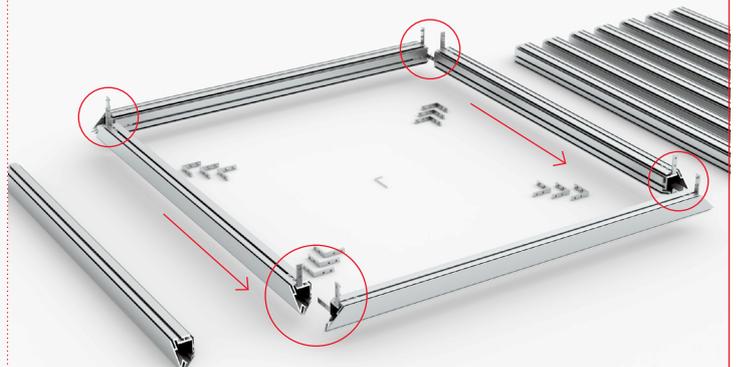


REFRAME® CUBE (RC051) ASSEMBLY GUIDE



5 Ensure each corner is fixed with 2x vertical facing brackets

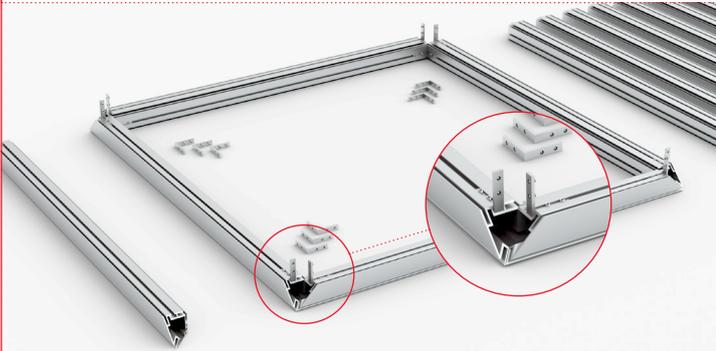


6 Lower vertical lengths onto vertical facing brackets

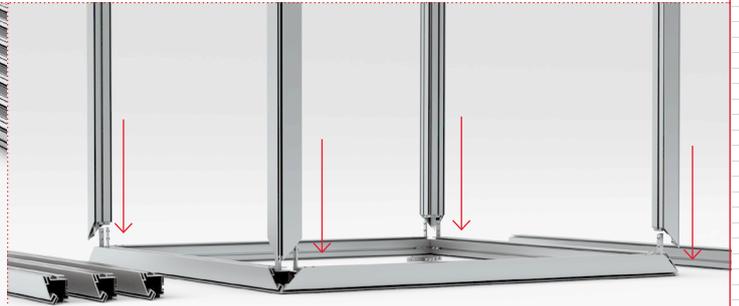


7 Ensure vertical frames are correctly in place



8 Repeat Step 2, 3 and 4 to make the top frame

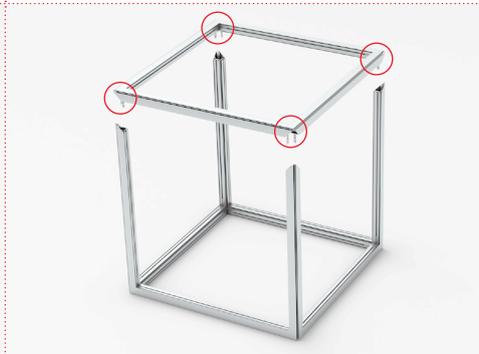


9 Connect top frame to vertical lengths

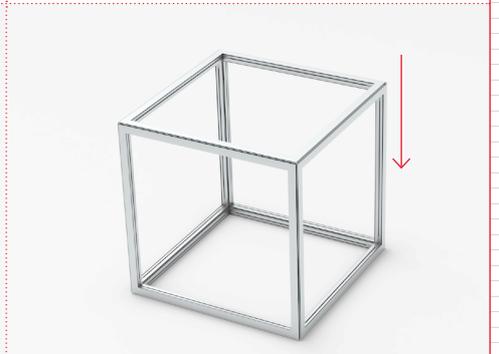

10 Using the provided allen key, fix the corner brackets



11 Repeat Step 8 on all remaining brackets to complete frame

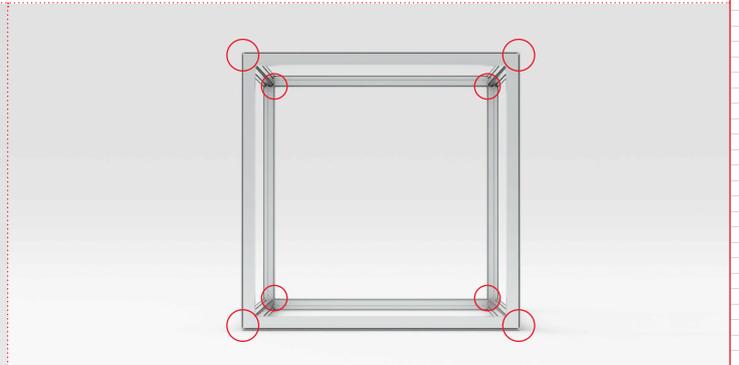

12 Applying your custom Reframe® fabric skin

Now that you've finished assembling your frame, it's time to apply your custom Reframe® fabric skin. Please refer to either a printed 'Reframe® Fabric Installation Guide' or go to www.reframe.com.au to watch one of our instructional assembly videos to see how to correctly apply your Reframe® fabric skin.

NOTE: The assembly instructions for the RC051 (and included components) illustrate the fundamental steps to assemble a 'standard' Cube type Reframe®. If your Reframe® is oversize, has additional components such as joiners (not shown on this fact sheet), accessories, or has bends/curves and you are unsure how to proceed with assembly, please contact the team at AFI Branding on 1300 652 514 and we will guide you through the assembly process.