


REFRAME® SINGLE-SIDED ASSEMBLY GUIDE



PRODUCT CODE: REFRAME® SINGLE-SIDED (SS108)

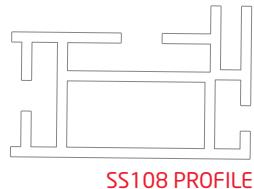


1

Layout the Reframe® components on a flat surface and ensure you have everything required before you start the assembly.

CHECKLIST

4X	CORNER BRACKETS
4X	REFRAME® LENGTHS
1 X	ALLEN KEY

- 2 Insert corner brackets into the channels of the top and bottom lengths of frame (screws may need to be loosened to allow brackets to slide into position)
NOTE: To ensure a precise line-up of the frame profiles, do not tighten any of the screws until you have reached step 6

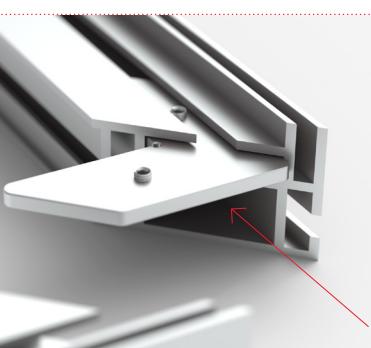


- 3 Slide top and side length together




- 4 Repeat on the opposite corner so that 3 lengths are connected



REFRAME® SINGLE-SIDED (SS108) ASSEMBLY GUIDE



5 Attach the remaining two corners at the same time

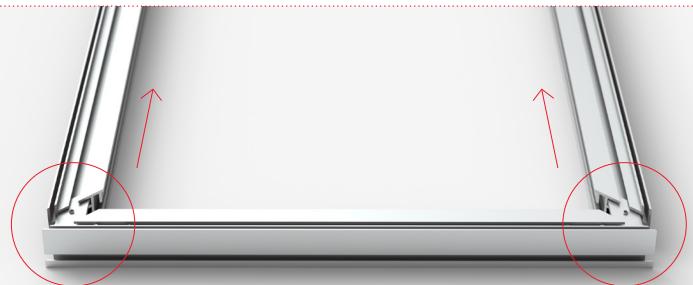

6 Ensure corner is aligned and then tighten screws using allen key



7 Repeat step 7 on all remaining corners



8 Applying your custom Reframe® fabric skin

Now that you've finished assembling your frame, it's time to apply your custom Reframe® fabric skin. Please refer to either a printed '*Reframe® Fabric Installation Guide*' or go to www.reframe.com.au to watch one of our instructional assembly videos to see how to correctly apply your Reframe® fabric skin.

NOTE: The assembly instructions for the SS108 (and included components) illustrate the fundamental steps to assemble a 'standard' Single-Sided type ReFrame®. If your Reframe® is oversize, has additional components such as joiners (not shown on this fact sheet), accessories, or has bends/curves and you are unsure how to proceed with assembly, please contact the team at AFI Branding on 1300 652 514 and we will guide you through the assembly process.